

TECH TIPS

XTR SERIES

NEED ADDITIONAL ASSISTANCE?

CALL 1.888.4DMPTEC (436.7832)

MON-FRI 7AM-7PM CST

WWW.DMP.COM/TECHTRAININGVIDEOS



DEFAULT USER CODE - 99

984 COMMUNICATION TEST - ENTER *984 CMD* NBR PKUP NET CEL

WIRELESS KEYPAD ASSOCIATION

- A. Power up the XTL Series panel, or press the RESET button
- B. Power up a 9800 Keypad v109 or higher within 10 minutes

AUTO WPS

- A. Once the XTL Series panel is on, press the router WPS button
- B. The panel will connect to the router automatically

KEYPAD PROGRAMMING

- A. Scroll carousel to Options (Graphic Touchscreen Keypad)
- B. Select "Installer Options" and enter INST (*3577*) CMD
OPT DIAG RF STOP

PANEL PROGRAMMING

Reset Panel (Press *RESET* button for 2 Seconds) and Enter *PROG* (*6653*)

DIAG NOSTICS

- A. Reset Panel (Press *RESET* button for 2 Seconds)
- B. Enter *DIAG* (*2313*)

CELL STATUS	PANEL SETTINGS
ACTIVATE CELL	TEST Z-WAVE
CELL SIGNAL	Wi-Fi Signal
EMAIL STATUS	STOP

WALK TEST

- A. Reset Panel (Press *RESET* button for 2 Seconds)
- B. Enter WALK (*8144*)
STD WLS PIR