

TECH TIPS



TECH VIDEOS



WWW.DMP.COM/WHATS_NEW
NEED ADDITIONAL ASSISTANCE?
CALL 1.888.4DMPTEC (436.7832)
MON-FRI 7AM-7PM CST

LT-1292 20061

DEFAULT USER CODE - 99

984 COMMAND FUNCTION - Enter 984 CMD

NBR TEST

PICKUP

LCD KEYPAD PROGRAMMING

A. Hold ← +CMD keys until SET BRIGHTNESS appears

B. Enter INST (3577) CMD

OPT DIAG STOP

PANEL PROGRAMMING

A. Reset Panel (Short J16 for 2 Seconds)

B. Enter PROG (6653)



DOCUMENTS

TOUCHSCREEN KEYPAD PROGRAMMING

A. Select OPTIONS from Carousel menu

B. Touch the INSTALLER OPTIONS icon

C. Enter INST (3577) CMD

OPT DIAG STOP

DIAGNOSTICS

A. Reset Panel (Short J16 for 2 Seconds)

B. Enter DIAG (2313)

TEST LX-BUS

ZONE FINDER

ZONE STATE

LX-BUS STATUS

X-BUS

MAC ADDRESS

SERIAL NUMBER

LOADER VERSION

CURRENT FLASH

COMM STATUS

CELL SIGNAL

ACTIVATE CELL PC

PROGRAMMING

TEST Z-WAVE STOP

WALK TEST

A. Reset Panel (Short J16 for 2 Seconds)

B. Enter WALK (8144)

BI FI PN SV

WLS PIR