


WIRING FOR END USER NOTIFICATIONS

Using Outputs to Arm and Disarm

A burglary control panel zone may be programmed as an arming zone and connected to output O1 or O2. Program the output number in armed output or remote arming output in output options when programming the communicator. The communicator output connections can be used with any of the applications listed in any of the Com Series Programming and Installation Guides.

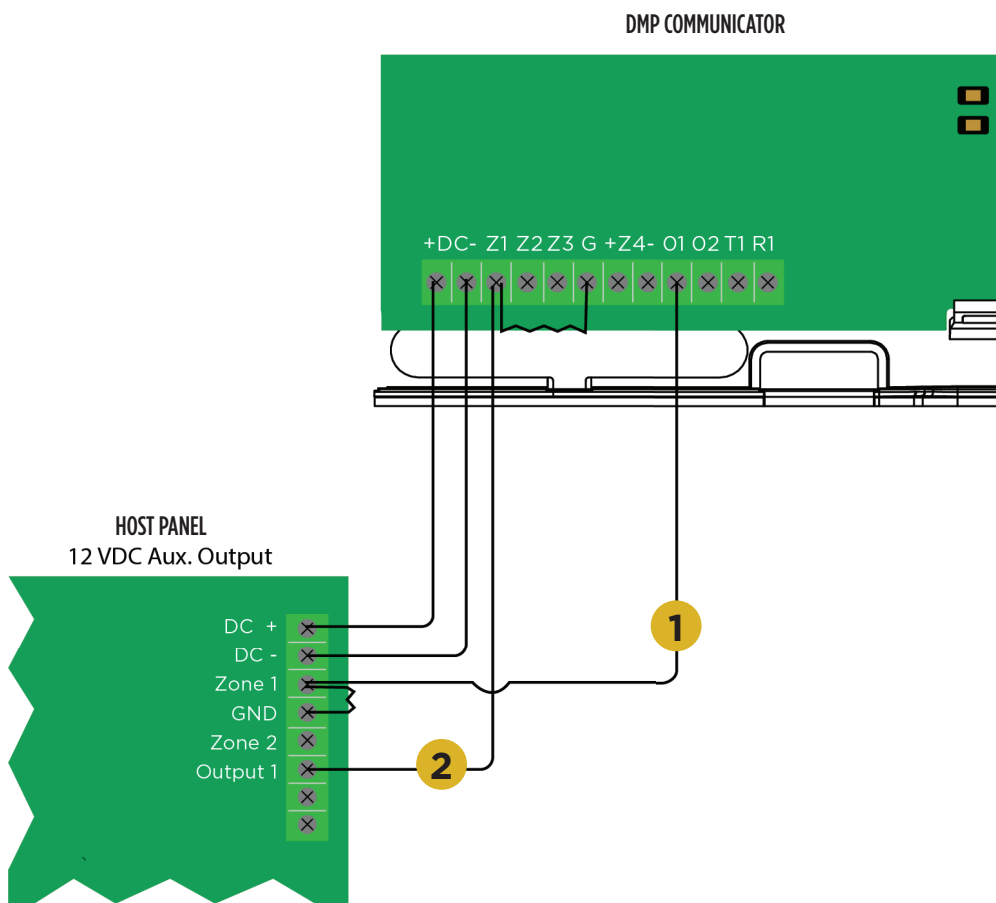

STEPS

1 Program output 1 of the DualCom as an armed output AND connect it to an open zone on the host panel. Program that zone as a keyswitch (arming zone).

2 Program an available output on the host panel as an armed output AND connect it to an open zone on the DualCom. Program that zone as an arming zone.



Note: With this setup you can arm from either a keypad or Virtual Keypad and receive arming and disarming push notifications.