



PROFILES

Profiles allow you to assign custom access permissions for different employee groups in your system.

PROFILE PREFERENCES

When enabled in a profile, these permissions allow profile members to perform the following actions:

Arm: Arm the system according to the options configured in Areas.

Disarm: Disarm the system according to the options configured in Areas.

Alarm Silence: Silence a system alarm.

Sensor Reset: Reset all system sensors. A sensor reset is required for all smoke detectors, flood sensors, and temperature sensors that have triggered an alarm, as well as system restoral after a lockdown is ended. A sensor reset is also required to clear a low battery (LOBAT) message after changing a wireless device's batteries.

Lockdown: Initiate a lockdown.

Lockdown Override: End a lockdown and restore the system using a sensor reset.

Door Lock/Unlock: Lock and unlock doors.

Door Access: Grant temporary door access.

Armed Areas: View armed areas at a keypad.

Outputs On/Off: Turn outputs on or off from the User Menu.

Zone Status: View the status of zones.

Bypass Zones: Bypass zones when arming the system.

Zone Monitor: Enable the chime function.

System Status: View the system's status.

System Test: Initiate a system test from the User Menu.

Profiles: Add, change, or delete profiles.

User Codes: Add, change, or delete user codes.

Extend: Extend a schedule for 2, 4, 6, or 8 hours.

Schedules: Add, edit, or delete schedules.

Time: Change the system date and time from the User Menu.

Display Events: View system events.

Service Request: Request a service call from your alarm provider.

Fire Drill: Initiate a fire drill.

Anti-Passback: Profile members are required to properly exit (egress) an area previously accessed. If they fail to exit through the proper location, they cannot access it again until they properly exit.

Easy Arm/Disarm: Arm or disarm all areas that are assigned to a code automatically.

Use Secondary Language: Display a secondary language.

Card Plus PIN: Use Card Plus Pin. Profile members are required to use two access methods to operate the system from a keypad. The first method must be a credential such as a proximity patch, card, or key fob. The second method must be a PIN number entered at the keypad.

Wi-Fi Setup: View the system's Wi-Fi settings, connect to available Wi-Fi networks, and use WPS association.

