

TECH TIPS



TECH VIDEOS



NEED ADDITIONAL ASSISTANCE?
CALL 1.888.4DMPTEC (436.7832)
MON-FRI 7AM-7PM CST

LT-1292 22045

DEFAULT USER CODE - The default master code is found on the serial number label. It is displayed as CODE followed by the default master code.

984 COMMAND FUNCTION - Enter 984 CMD NBR TEST PICKUP

LCD KEYPAD PROGRAMMING

A. Hold ← + CMD keys until SET BRIGHTNESS appears

B. Enter INST (3577) CMD

OPT DIAG STOP

PANEL PROGRAMMING

A. Reset Panel (Short J16 for 2 Seconds)

B. Enter PROG (6653)



DOCUMENTS

TOUCHSCREEN KEYPAD PROGRAMMING

A. Select OPTIONS from Carousel menu

B. Touch the INSTALLER OPTIONS icon

C. Enter INST (3577) CMD

OPT DIAG STOP

DIAGNOSTICS

A. Reset Panel (Short J16 for 2 Seconds)

B. Enter DIAG (2313)

TEST LX-BUS

MAC ADDRESS

CELL SIGNAL

ZONE FINDER

SERIAL NUMBER

ACTIVATE CELL

ZONE STATE

LOADER VERSION

PC PROGRAMMING

LX-BUS STATUS

CURRENT FLASH

TEST Z-WAVE

X-BUS

COMM STATUS

STOP

WALK TEST

A. Reset Panel (Short J16 for 2 Seconds)

B. Enter WALK (8144)

BI FI PN SV

WLS PIR