 **ENTRÉ**



With DMP Entré enterprise software, XR Series™ system users can manage both intrusion and access control in one easy-to-use software application. System managers can now have fast, simple point-and-click control of their security systems.

Highly Customizable

Take advantage of the extensive customization capabilities to create a system that matches your needs. Define what events are considered “alarms” and what response is required from the system operator. Tailor your user data with the 20 available custom user-defined fields.

Automation Module

Advanced users have the power to create automated system actions. Define automatic responses to any system alarm or events. These include generating a report, generating an alert email or sending commands to selected devices. Create scheduled system actions to run once at a specified time and date or scheduled events that repeat at your defined time and date intervals. System automation enables you to configure unattended activities, freeing system managers from many routine responsibilities.


Alarm Graphics

The graphical representation of events and alarms gives you at-a-glance feedback of system status. System maps are linked from level to level, allowing you to drill down from a macro view to a specific room or area. View alarm status at every level. User-defined layers representing different alarm types allow you to customize the graphical interface to meet your needs. Click on the alarm display icon to acknowledge an alarm or request additional information.



System Features

- ▶ Intuitive user interface for system monitoring and control
- ▶ All security management activities combined in a single, scalable enterprise platform
- ▶ Network system enables monitoring and control of facilities anywhere, from anywhere
- ▶ Web or Full user clients both available
- ▶ Supports DHCP and EASYconnect™ connections to XR150 and XR550 Series systems
- ▶ Simple user management with the ability to import users from existing databases
- ▶ Assign user access by profiles, facility or other parameters
- ▶ Drop-down lists for devices, user data and other information facilitate fast and accurate searches
- ▶ View system status in one of a variety of views for simplified alarm monitoring management
- ▶ Customizable reports for added flexibility
- ▶ Image management of users
- ▶ Point-and-click control of alarms and devices
- ▶ Modular design enables customization with optional modules for added features
- ▶ Full reporting with the ability to produce reports in a variety of file types
- ▶ SQL database reporting or use existing pre-written reports

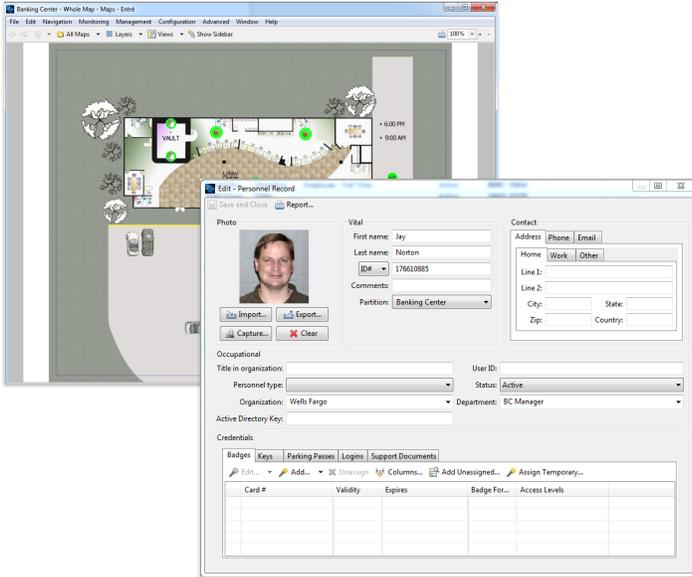

Graphical Site Maps

Load an unlimited number of graphical images of your protected facilities in a variety of file formats. Once loaded, plot your alarm devices on the graphics using drag-and-drop selections from a hierarchical list of hardware. Identify the areas on your site maps, defining them by Classification, Entrances, Zones and Partitions.

With your site maps established, you have total picture-based monitoring and control of your system. From facility-wide views, click to zoom in on any area of the facility and view the real-time status of any device. Point and click on a device for more information or to control and change its operating parameters.

User Management

Avoid the need to re-enter user data by importing it into Entré from existing systems via standard comma-separated value (CSV) format files. Easily add new users, capture and edit their photos for badging or visual verification, all within the application.

User fields are fully customizable. Assign specific rights or events by user or by profiles. Create expiration date for users, limiting access to only certain times of the day, only certain days or for only a defined period of time.

Hierarchical Views

Select from four different system views with the ability to have multiple views open simultaneously. Select the graphical Map view, tabular Event view or hierarchical Tree view. In any view, click on a device or alert to access additional information and process the event. In text-based views, simple drill downs allow fast navigation to the desired item. For example, when searching Protected Locations, start at the top-level of Region and click down through Campus, Building, Floor, Area and Sub-Area to view the desired location.

Powerful Search

Industry standard SQL database can be quickly and easily searched to identify any desired device or user.

Single-System Control

As a network solution, you can manage installations and users from anywhere. A single, unified database means there's one badge, one face or one user, worldwide. The easy-to-use interface makes for simple system configuration and user rights management.

Badge Image Capture


Transfer pictures of users from a digital camera directly onto a badge.

Badge Designer

Create one or more badge designs, customizing badges by facility, user level or other parameters. When badging employees or visitors, select the desired badge template from your library. The template automatically populates with the appropriate data and is ready for printing.

Dual Language

Entré supports English and Spanish. Enabling this module allows the operator to select a language during their login process.

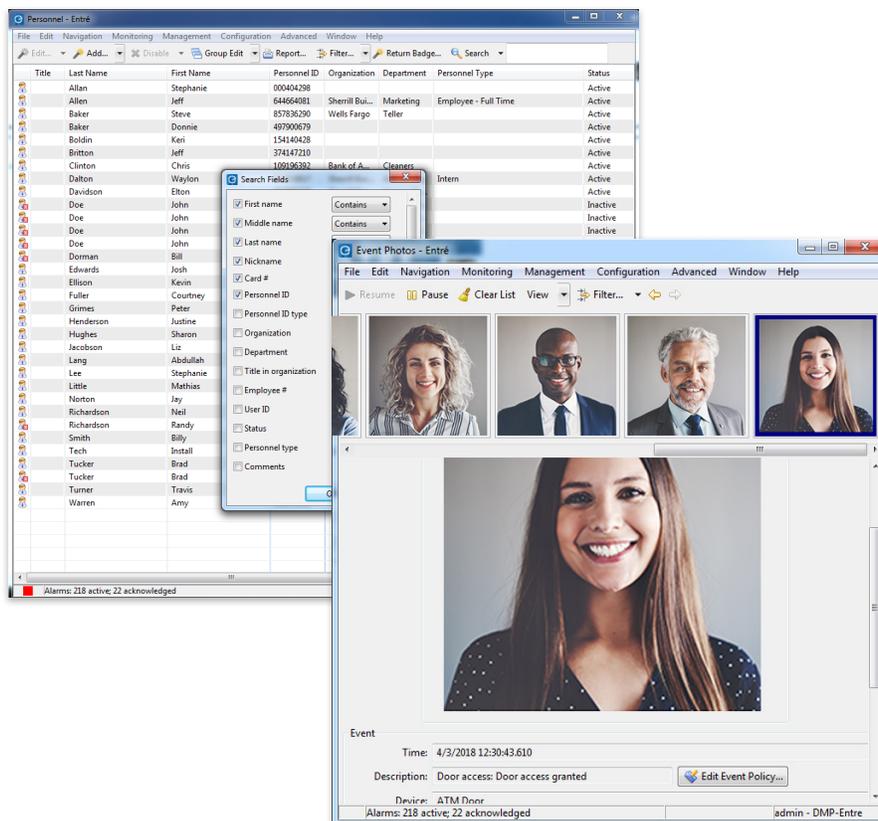

LICENSE COMPARISONS

| | |
|-------------------------|--|
| ENTRÉ LITE | Provides 16 doors of access control and gives XR Series control panel users the ability to manage intrusion and access control across multiple facilities from a private network. |
| ENTRÉ BUSINESS | Provides 16 doors of access control with additional licenses available to expand up to 96. |
| ENTRÉ ENTERPRISE | Provides 96 doors of access control with additional licenses available to expand up to 400 doors and 500 panels. |
| ENTRÉ NOC | Provides access, security and audit compliance management for large enterprises. This highly customizable and powerful software innovation scales to over 5,000 systems to meet the needs of managing a single building to a campus or a global enterprise of centers with thousands of users. |

| | LITE | BUSINESS | ENTERPRISE | NOC |
|------------------------|------|----------|------------|-----------|
| PANELS INCLUDED | 4 | 24 | 100 | 40 |
| MAX PANELS | 4 | 24 | 500 | Unlimited |
| DOORS INCLUDED | 16 | 16 | 96 | N/A |
| MAX DOORS | 16 | 96 | 400 | Unlimited |
| PARTITIONS INCLUDED | N/A | N/A | 0 | 10 |
| MAX PARTITIONS | N/A | N/A | 3 | 30 |
| BADGE MODULES INCLUDED | 1 | 1 | 1 | 1 |

AVAILABLE ADD-ON LICENSES

| | | | | |
|--|---|---|---|---|
| ENTRÉ-10PNL | | | • | |
| ENTRÉ-100PNL | | | • | |
| ENTRÉ-NOC-10PNL | | | | • |
| ENTRÉ-NOC-100PNL | | | | • |
| ENTRÉ-4DR | | • | • | |
| ENTRÉ-16DR | | • | • | |
| ENTRÉ-32DR | | • | • | |
| ENTRÉ-64DR | | • | • | |
| ENTRÉ-128DR | | • | • | |
| ENTRÉ-CLIENT | • | • | • | • |
| ENTRÉ-PART | | | • | • |
| ENTRÉ-BADGE | | • | • | • |
| SECURE LIGHTWEIGHT DIRECTORY ACCESS PROTOCOL (LDAPS) | | | | • |

DOCUMENT LIBRARY

ENTRÉ INSTALLATION, SETUP AND SERVER MAINTENANCE GUIDE

LT-2494

Use this guide to view steps on how to configure your Apache Tomcat settings, add and delete a panel, perform maintenance on your server, construct your server architecture and reference the data flow in Entré.

- [Server Architecture](#)
- [Firewall Settings](#)
- [Java Settings](#)
- [Data Flow Reference](#)
- [Configure Apache Tomcat Settings](#)
- [License the Software](#)
- [Server Maintenance](#)
- [Add, Swap and Delete a Panel](#)
- [Network and DBMS Troubleshooting](#)
- [Wireshark](#)

ENTRÉ OPERATIONS GUIDE

LT-2495

Use this guide when performing daily tasks in Entré.

- [Manage Credentials](#)
- [Set Up Automatic Badge Disabler](#)


ENTRÉ NOC SINGLE SIGN-ON, ACTIVE DIRECTORY AND LDAPS GUIDE

LT-2455

Use this guide when setting up LDAPS in Entré, configuring Active Directory and working with Single Sign-On.

- [Single Sign-On](#)
- [Active Directory](#)
- [Lightweight Directory Access Protocol \(LDAPS\)](#)

ENTRÉ ARCHITECTURE

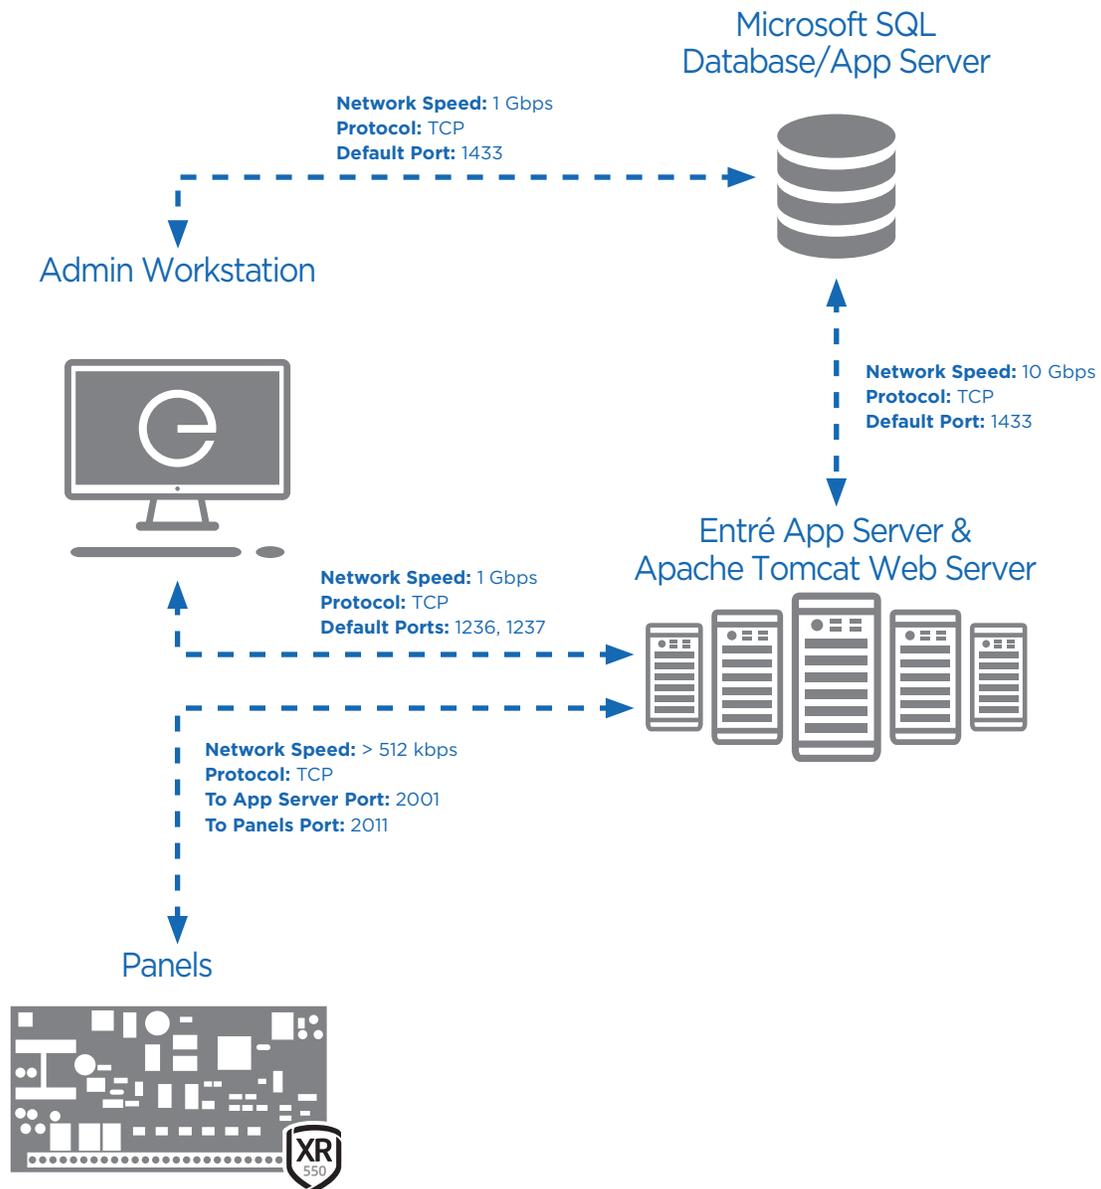



Ordering Information

Entré Certification is required. DMP offers the Entré product and support exclusively to dealers with at least one technician who is certified in Entré. An additional Entré Dealer Agreement addendum is required.

System Requirements/Operating System Compatibility

Please reference DMP.com/products/entré-software for all system requirements and operating system compatibility information.

Panel Compatibility

- ▶ XR150 Series Panels
- ▶ XR550 Series Panels

Software License

- ▶ One license per Application Server (Full client)
- ▶ One license per concurrent seat (Web client)

